



Showers

DC 4141

DC COLLECTION

Design Wetstyle Design Lab



WETSTYLE.COM 1-888-536-9001 | Montréal, Canada Page 1



FEATURES

Handcrafted in Montreal, Canada


Drain location: corner


No membrane or floor slope construction is needed Made of WETMAR BiO, which is naturally slip-resistant

TECHNICAL DETAILS

• Width: 41" • Length: 41" • **Height:** 1.5"

• Weight: 56 lbs / 25 kg

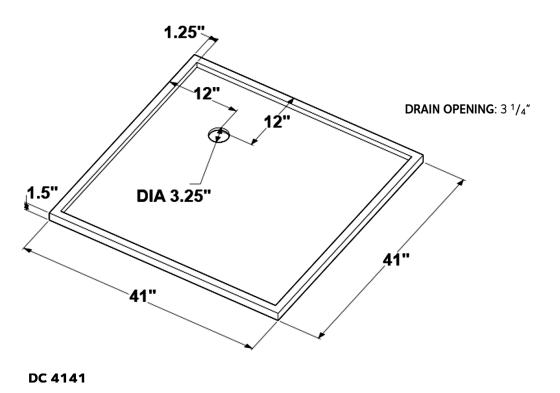

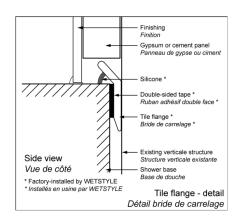

WETSTYLE cannot be held responsible for any technical errors and reserves the right to make revisions without notice. Approximate measurement. The manufacturer accepts 1/4" (6.35mm) variance.

WETSTYLE.COM 1-888-536-9001 | Montréal, Canada Page 2



AVAILABLE CONFIGURATIONS



DC414101 - No Tile Flange



DC414102L - Left Drain - Back Wall



DC414102R - Right Drain - Back Wall



DC414104L - Left Drain - Left and Back Walls



DC414105R - Right Drain - Right and Back Walls





OPTIONS

Model

- DC364801 No Tile Flange
- DC364802 Back Wall
- DC364804 Left and Back Walls
- DC364805 Right and Back Walls
- DC364806 Three Wall Alcove
- DC414101 No Tile Flange
- DC414102L Left Drain Back Wall
- DC414102R Right Drain Back Wall
- DC414104L Left Drain Left and Back Walls
- DC414105R Right Drain Right and Back Walls
- DC414106L Left Drain Three Wall Alcove
- DC414106R Right Drain Three Wall Alcove

WETMAR BIO Finish

- White Matte (#MA)
- White True High Gloss (#GA)

WETSTYLE.COM 1-888-536-9001 | Montréal, Canada Page 3



NOTES

IMPORTANT - SHOWER INSTALLATION SUPPLIES: A 1/4" tile flange will be supplied to comply with the requested position. Installed at the factory to prevent water leakage, this must be placed directly on the partition framing prior to the installation of drywall. For installation, it is important to level the shower receptor in order to ensure maximum drainage.

DRAIN: Not supplied, any regular shower drain will fit

WETSTYLE.COM 1-888-536-9001 | Montréal, Canada Page 4