

## Showers

**DC 6030** 

DC COLLECTION

**Design** Wetstyle Design Lab





# **FEATURES**

Handcrafted in Montreal, Canada


Drain location: end-drain


No membrane or floor slope construction is needed Made of WETMAR BiO, which is naturally slip-resistant

## **TECHNICAL DETAILS**

Width: 30"Length: 60"Height: 1.5"

• Weight: 84 lbs / 38 kg

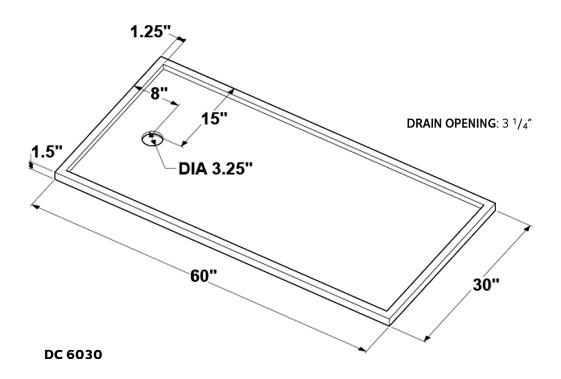

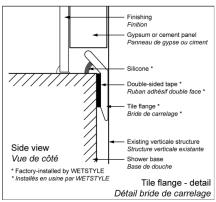

WETSTYLE cannot be held responsible for any technical errors and reserves the right to make revisions without notice. Approximate measurement. The manufacturer accepts ¼" (6.35mm) variance.



## **AVAILABLE CONFIGURATIONS**











DC603001 - No Tile Flange DC603002L - Left Drain - Back Wall DC603002R - Right Drain - Back Wall DC603002B - Rear Drain - Back Wall DC603004L - Left Drain - Left and Back Walls







Left Drain - Three Wall Alcove



Right Drain - Three Wall Alcove



DC603006B - Rear Drain - Three Wall Alcove

### **OPTIONS**

Model

Back Walls

- DC603001 No Tile Flange
- DC603002B Rear Drain Back WallDC603002L Left Drain Back Wall
- DOCOGOGO D' L. D. ' D. L. W.
- DC603002R Right Drain Back Wall
  DC603004L Left Drain Left and Back Walls
- DC603005R Right Drain Right and Back Walls
- DC603006B Rear Drain Three Wall Alcove
- DC603006L Left Drain Three Wall Alcove
- DC603006R Right Drain Three Wall Alcove

#### **WETMAR BiO Finish**

- White Matte (#MA)
- White True High Gloss (#GA)



# **NOTES**

**IMPORTANT - SHOWER INSTALLATION SUPPLIES:** A 1/4" tile flange will be supplied to comply with the requested position. Installed at the factory to prevent water leakage, this must be placed directly on the partition framing prior to the installation of drywall. For installation, it is important to level the shower receptor in order to ensure maximum drainage.

**DRAIN:** Not supplied, any regular shower drain will fit